

MobiPhone

USER MANUAL



MobiWire

TABLE OF CONTENTS

1. FIRST STEPS

- 1.1 Inserting a SIM card
- 1.2 Inserting the battery
- 1.3 Charging your phone
- 1.4 Switching on your phone
- 1.5 Using the keyboard
- 1.6 Understanding the battery charge level


2. DAILY USES

- 2.1 Launching a call
- 2.2 Opening your call log
- 2.3 Writing an SMS
- 2.4 Opening your inbox
- 2.5 Opening sent messages
- 2.6 Adding a contact
- 2.7 Calling your voicemail
- 2.8 Using speakers
- 2.9 Using earphones
- 2.10 Locking the phone

3. SETTINGS

- 3.1 Choosing your language
 - 3.2 Setting date and time
 - 3.3 Setting the ringtone
 - 3.4 Choosing your wallpaper
 - 3.5 Own Area Code
 - 3.6 Restoring default settings
-


1. FIRST STEPS

First, make sure your phone is powered off. If not, long press the red key  to switch it off


1.1 Inserting a SIM card

Remove the battery cover.

Insert the MicroSIM card as indicated on the image below.

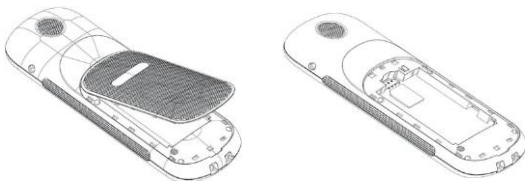


 WARNING: If you have a NanoSIM, you need to use a MicroSIM adaptater.

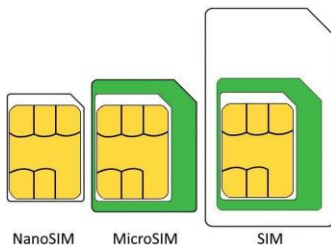


1.2 Inserting the battery

 Remove the battery cover.

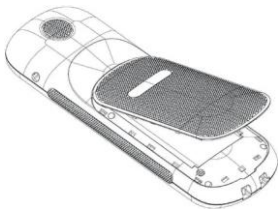

Place the battery as indicated on the image below.

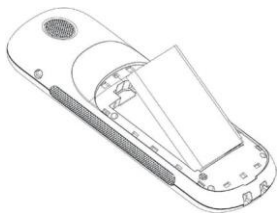

Replace the battery cover on the phone.



1.3 Charging your phone

To charge your Mobiphone, place the phone on its cradle as indicated below.



1.4 Switching on your phone

Press and hold the red key  to switch on the phone.



1.5 Using the keyboard



To see the menus of the phone, press the validation key.



Use the navigation pad to move across the menus.



1.6 Understanding the battery charge level

To see the battery charge level, refer to the battery icon in the upper right corner. The battery level is displayed as such:



The battery icon flashes if the battery charge level is low. Once the icon started flashing, you can still use the phone for about an hour. We advise you to put the phone back on its cradle to charge it.



2. DAILY USES

All the basic tasks are explained in this section.


These are the tasks:

- Launching a call
- Opening the call log
- Writing an SMS
- Opening inbox
- Opening sent messages
- Adding a contact
- Calling voicemail

2.1 Launching a call

To launch a call, you can directly dial a number or choose a contact in the **Phonebook**.

2.1.1 Dialing a number

To make a call, dial a number and press the green key .

As this is on the mobile network you will have to dial the area code of the number you are wanting to call, same as if you are calling from a mobile.

 
If you would like to call local numbers without entering the area code you need to enter your area code in the call settings – Own Area Code (see settings 3.5.1).

2.1.2 Calling a contact


To call a contact




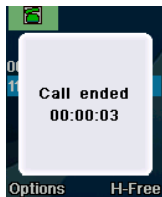
Select **Phonebook** in the menus.

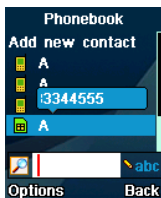


Select a contact.

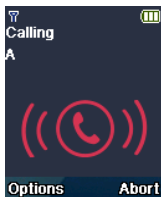

Press the green key  or select **Options** and select **Call**.



Press the red key  to hang up

 
2.2 Opening your call log

To open your call log

Dialled calls




Select **Call Center** in the menus.

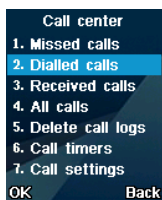


Select **Dialled calls** in the list.

 Received calls

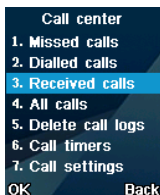

Select **Received calls** in the list.

 Missed calls

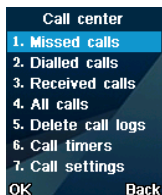


Select **Missed calls** in the list.

2.3 Writing an SMS


To write an SMS



 
Select **Messaging** in the menus.

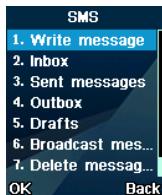

 Select **Write message**. Type your message.

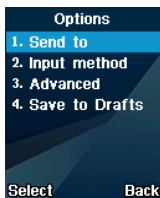

Select **Options** and
Send to.

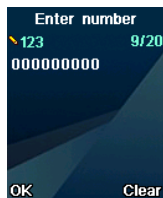 


Select **Enter number**. If the contact is in the Phonebook, select **Add from Phonebook**. Select **Options** and **Send**.

2.4 Opening your inbox

To get to your inbox



 Select **Messaging** in the menus.

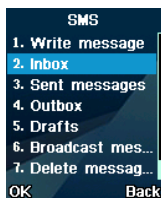


Then select **Inbox**.

2.5 Opening sent messages

To see your sent messages



 Select **Messaging** in the menus.

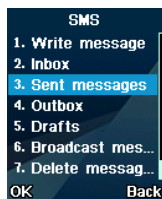


Select **Sent messages**.

2.6 Adding a contact


To add a contact to your phonebook



 
From the idle screen, type a number.

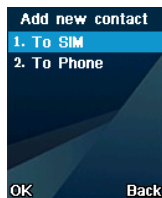

 Then, select **Save**. Choose between saving the contact on the **SIM** card or on the **Phone**.

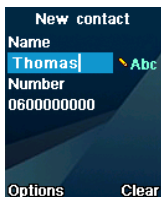

 Type the name of the contact, and select **Options**.

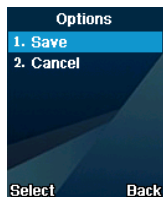


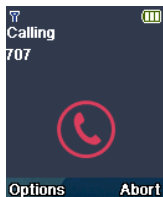 
Select **Save**.

2.7 Calling your voicemail

To call your voicemail:

 


From the idle screen, type 021700700 and press the green key  or call voicemail from the Phonebook.




Or press and hold the "1" key to directly call your voicemail.

2.8 Using speakers

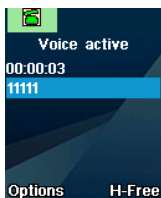

 Once in a call, you can use the speakers by pressing the upper right key.

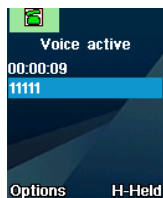

When H-Held is displayed, press the upper right key to stop using the speakers.

2.9 Using earphones



Plug your earphones to the jack plug of your phone.



To hang up a call, press the button on the wire of your earphones.

2.10 Locking the phone

To lock the phone press the red button . A padlock will show on the screen.

To unlock the phone press the unlock key  then the red key .

 


3. SETTINGS


Use the Settings menu to change :

- Language
- Date and time
- Ringtone
- Wallpaper
- Restore default settings


3.1 Choosing your language

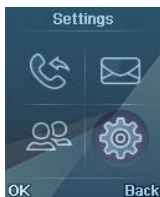

Select **Settings** in the menus.

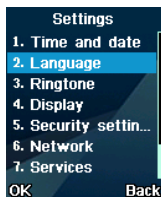 


Select **Language**.

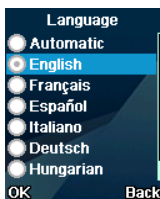 


Select the desired language.
Press the validation key or the upper left key.

3.2 Setting date and time

 
To set the time and date

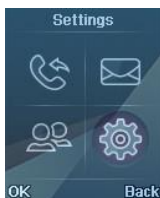


Select **Settings** in the menus.

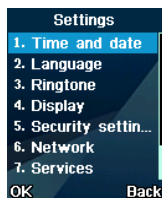 

Select **Time and date**.

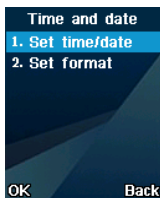 


Select **Set time/date**.

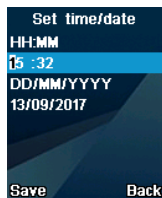 


Once you have set the time and date, press the upper left key to **Save**.

3.3 Setting the ringtone

 
To set the ringtone

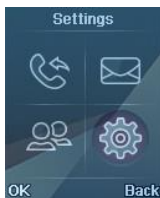


Select **Settings** in the menus.

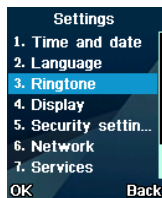 

Select **Ringtone**.

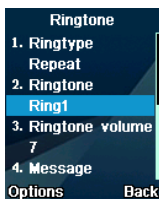 

 Use the navigation pad to select Ring1 in the group **Ringtone**.

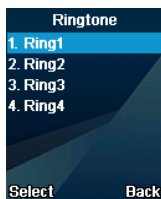


Press the validation key and select a ringtone in the list.

3.4 Choosing your wallpaper


To choose your wallpaper



 
Select **Settings** in the menus.

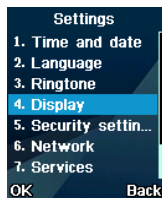

Select **Display**.

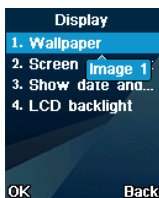 


Select **Wallpaper**.

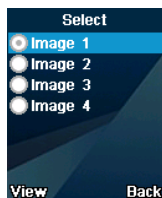 


Select an image in the list and press the validation key.

 
3.5 Own Area Code

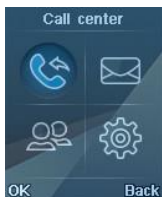


Select **Call Center** in the menus.

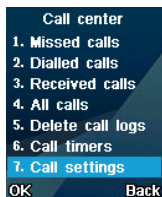 

Select **Call Settings**.

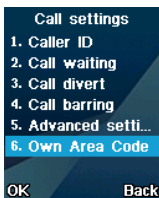 


Select **Own Area Code**.

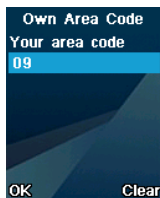 


Enter your own area code and select **OK**.

3.6 Restoring default settings

 To restore the default settings

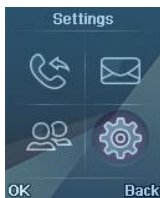

Select **Settings** in the menus.

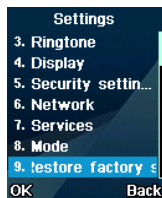 

Select **Restore settings**.

Type **0000** in the "Input phone password" field. Press the validation key or the upper left key.

[illegible]



MobiWire

the smartpurchase.

www.mobiwire.com
